


MODEL 300 PEDESTAL BOWL INSTALLATION INSTRUCTIONS

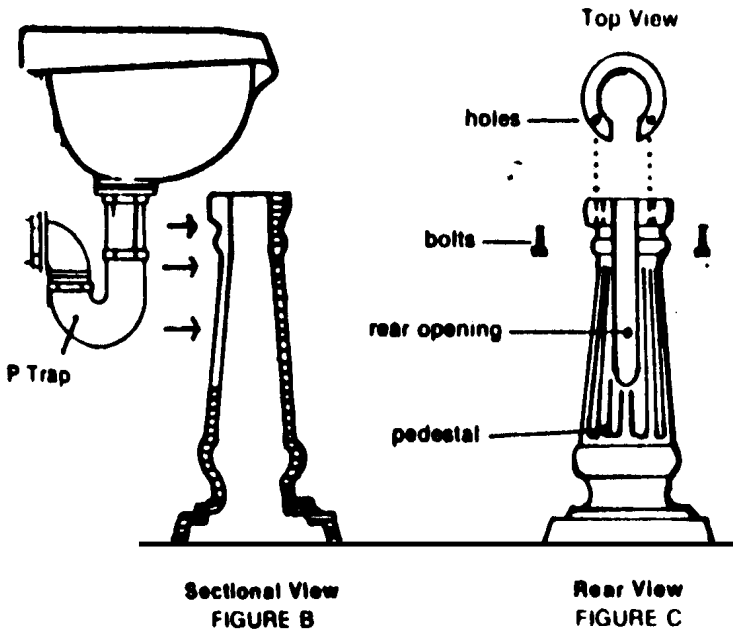

STEP 1. Assemble and seal Basket Strainer to bowl. Attach 4" tailpiece (included) and P-Trap (not included). Check thoroughly for leaks. (Figure A)

NOTE: Use 4" tailpiece only.

STEP 2. Place bowl in pedestal with P-Trap assembly extending through the rear opening. (Figure B) Insert bolts through holes in pedestal to threaded inserts in bottom of bowl and tighten securely. (Figure C)

STEP 3. Attach mounting plate to bowl and tighten firmly. Place the unit against bulkhead or wall and fasten mounting plate to it. (Figure D)

ALL PLUMBING ROUGH IN MEASUREMENTS SHOULD BE MADE TO CORRESPOND TO THOSE SHOWN FOR THE BOWL.

